OLIN

quick start & user guide

OM206
Media Player

This manual contains information protected by copyright law. No part of this document may be used or reproduced in any form or by any means, or stored in a database / retrieval system without prior written permission from Linophir International Pty Ltd. The information of this manual is base on the current version of the product; we reserve the right for change without prior notice. All brand names in this manual are the property of their respective owners.

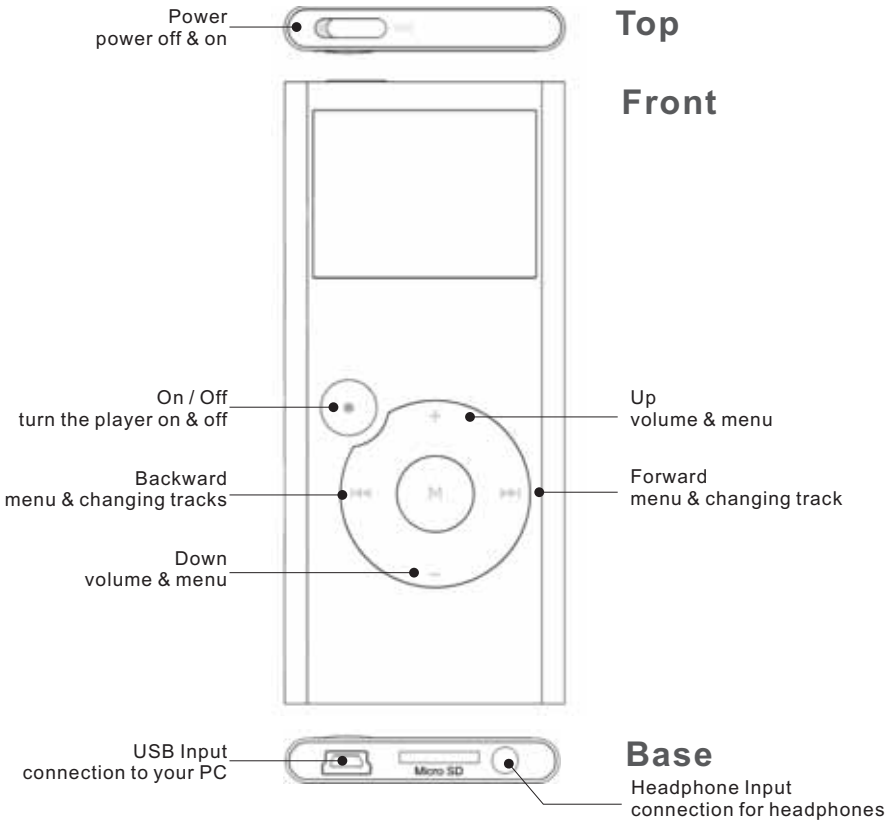

store & transfer files
The OM206 can store and transfer any files you have on your computer acting as a portable hard drive

The OM206 Media Player works as an external hard drive or storage device via the USB port on your computer. Windows XP and Vista users will find the moment they connect the player via the USB cable, the computer recognises a new device and following a few steps the OM206 is installed.

Unlike other media players, the OM206 will not limit how you interact with the device by insisting on specific software to communicate with the player when it is connected to the computer.

The OM206 easily interfaces with your operating system, allowing you to " drag and drop" your pre-existing music and video collection into its folder. Just like a USB memory stick or an external hard drive, once the data has been placed in the OM206 folder, the player can be disconnected from the USB port and your portable music, video and file experience begins.

features

- 6.5mm thick media player with polished aluminium alloy casing.
- 1.5″ high resolution (176x132) high contrast TFT display.
- External T-Flash / Micro-SD memory card compatibility up to 2GB.
- Music playback.
- Playback of MPEG 1/2/2.5 Layer I/II/III and WMA music files.
- Video playback
- Playback of MPEG4 (AVI) videos trans-coded from AVI, DAT, MPEG, RM, RMVB and VOB formats.
- Digital voice recording and playback.
- Recording via a built-in microphone saved as WAV format stored on the player.
- JPEG photo browsing.
- E-book with background music playback. Bookmark function supported.
- Built-in mini-game with background music playback.
- Multi-lingual graphic user interface.
- Preset equalizer effects (EQ) and 5-band user-defined graphic equalizer.
- USB mass storage.

contents

Quickstart for Windows XP — page 7
Quickstart for Windows Vista — page 9
Quickstart for Windows 98 — page 11
Charging the media player — page 12
Adding files to the media player — page 14
Playing an Mp3 — page 16
Display Lyrics — page 18
Display Photos — page 19
Display a photo slide show — page 20
Play a movie — page 22
Record voice and sound — page 24
Play voice and sound recording — page 25
Reading an e-book — page 27
Bookmark an e-book — page 29
Loading a bookmark — page 30
Playing the mini game — page 31
Keylocking the player — page 32
Deleting a file — page 34
Installing the .avi converter — page 36

Using the .avi converter — page 42
Repeat mode settings — page 49
Play mode settings — page 52
EQ select — page 54
User EQ select — page 56
Changing the recording quality — page 58
Change the recording volume — page 60
Change text auto browse speed — page 62
Change photo auto browse speed — page 64
Change background light off time — page 66
Change screen luminance — page 68
Change background light mode — page 70
Reset to default settings — page 72
Power off time select — page 74
Expanding the memory — page 75
Troubleshooting — page 78
Firmware upgrade — page 79
Safety precautions — page 79

quickstart for Windows XP

A guide to installing your OM206 Media Player on a computer running Windows XP.

Step 1

Connect the USB cable from the bottom of the OM206 Media Player into the USB port on your computer

Step 2

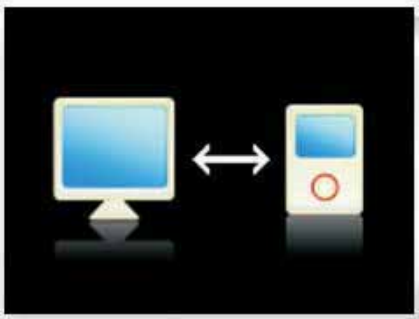

The OM206 Media Player will identify the connection with the computer by displaying this screen.

Step 3

Windows XP will display a series of messages at the bottom your computer screen. This will continue until Windows XP displays "Your new hardware is installed and ready to use"

Step 4

Your Om206 Media Player is now installed

quickstart for Windows Vista

A guide to installing your OM206 Media Player on a computer running Windows Vista.

Step 1

Connect the USB cable from the bottom of the OM206 Media Player into the USB port on your computer

Step 2

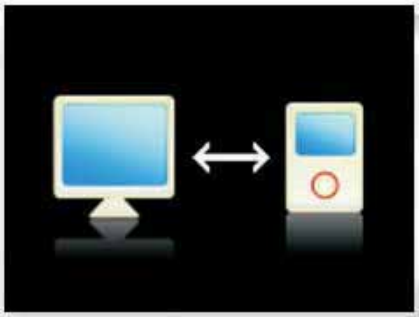

The OM206 Media Player will identify the connection with the computer by displaying this screen.

Step 3

Windows vista will display a series of messages at the bottom your computer screen. This will continue until Windows XP displays "Your new hardware is installed and ready to use"

Step 4

Your Om206 Media Player is now installed

quickstart for Windows 98

A guide to installing your OM206 Media Player on a computer running Windows 98.

Customers who use Window 98 Operating System, please contact Linophir support team for further instruction and driver download.

charging the media player

A guide in how to charge the OM206 Media Player.

Step 1

Connect the USB cable from the bottom of the OM206 Media Player and into the USB port on your computer.

Step 2

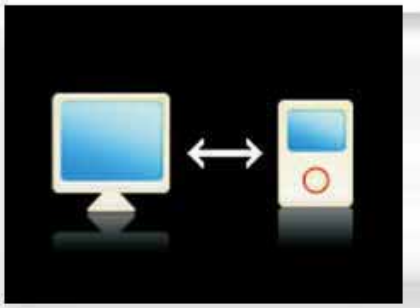

The OM206 Media Player will identify it has been plugged into a computer by displaying this picture on its screen. Whilst your player is connected to your computer, it will charge the battery.

information

The OM206 can be charged from any USB port without prior installation on the computers operating system. This screen will show when the OM206 Media Player is charging in this manner.

information

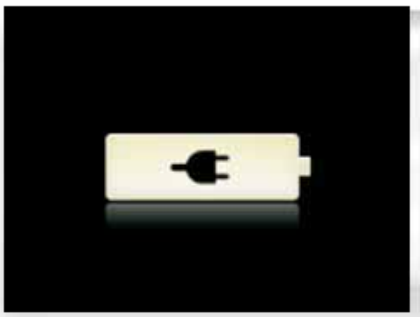

The OM206 Media Player will display this screen when the battery is fully charged.

adding files to the media player

A guide in adding files to the OM206 Media Player.

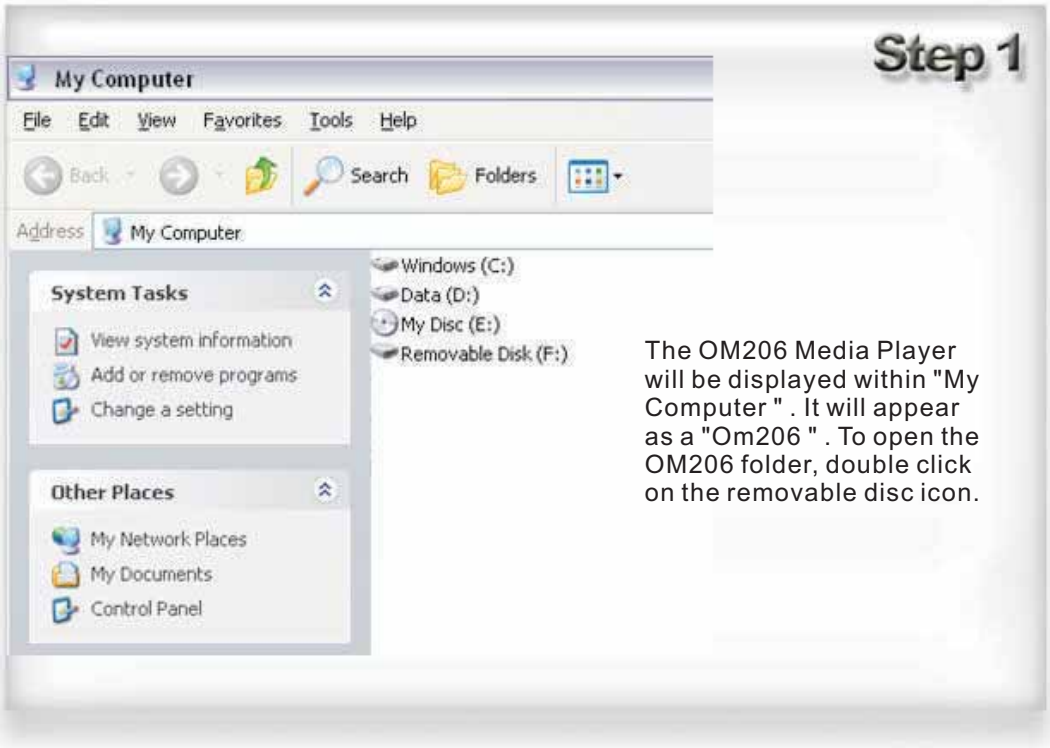

The OM206 Media Player will be displayed within "My Computer " . It will appear as a "Om206 " . To open the OM206 folder, double click on the removable disc icon.

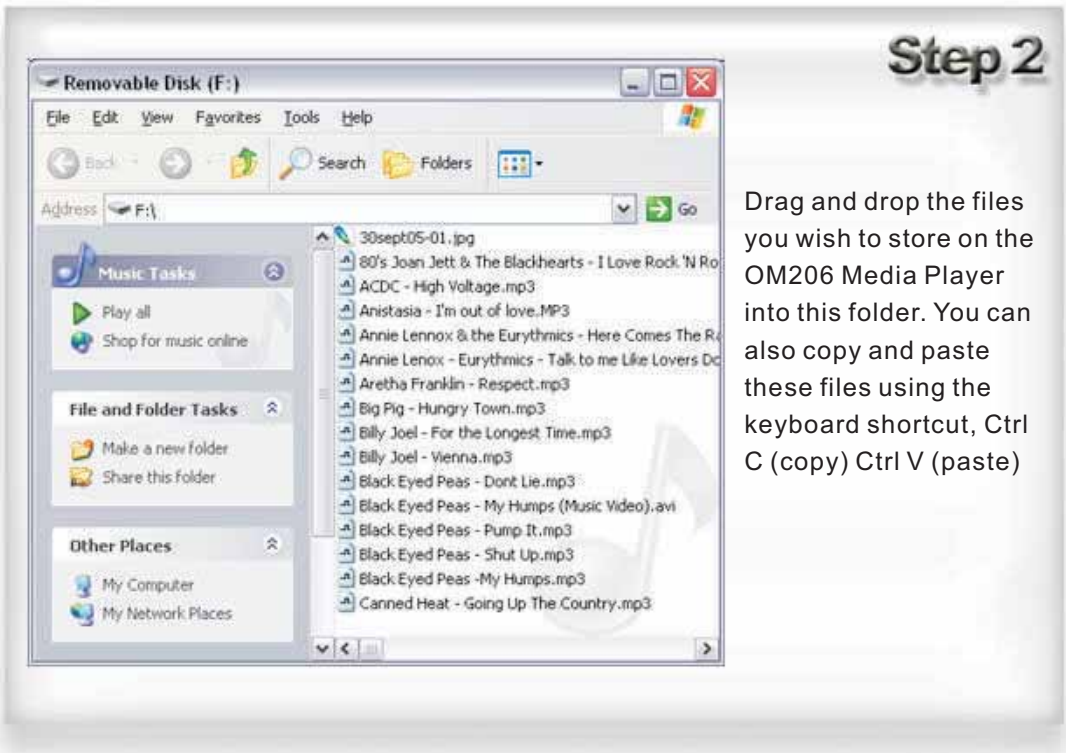
Step 2
Removable Disk (F:)
File Edit View Favorites Tools Help
Back Search Folders
Address F:\
Go
Music Tasks
Play all
Shop for music online
File and Folder Tasks
Make a new folder
Share this folder
Other Places
My Computer
My Network Places
30sept05-01.jpg
80's Joan Jett & The Blackhearts - I Love Rock 'N Ro
ACDC - High Voltage.mp3
Anistasia - I'm out of love.MP3
Annie Lennox & the Eurythmics - Here Comes The R
Annie Lenox - Eurythmics - Talk to me Like Lovers Do
Aretha Franklin - Respect.mp3
Big Pig - Hungry Town.mp3
Billy Joel - For the Longest Time.mp3
Billy Joel - Vienna.mp3
Black Eyed Peas - Dont Lie.mp3
Black Eyed Peas - My Humps (Music Video).avi
Black Eyed Peas - Pump It.mp3
Black Eyed Peas - Shut Up.mp3
Black Eyed Peas -My Humps.mp3
Canned Heat - Going Up The Country.mp3

Drag and drop the files you wish to store on the OM206 Media Player into this folder. You can also copy and paste these files using the keyboard shortcut, Ctrl C (copy) Ctrl V (paste)

playing an Mp3

A guide in how to play an Mp3 file on the OM206 media player

Step 1

Within the main menu, use the ⏭ or + or − . on the OM206 keypad. Once the Music icon appears on the screen, press the M button.

Step 2

The OM206 Media Player will begin to play the first song stored within the OM206 Media Player folder.

information

- ⏭ **Forward** - go to the next Mp3 track
- ⏮ **Backward** - go to the previous Mp3 track
- \+ **Volume Up** - turn the volume of the track up
- − **Volume Down** - turn the volume of the track down
- M **Return to menu** - hold down to return to music menu
- ● **Pause / Play** - pause music by pressing, resume by pressing again

Whilst an Mp3 file is playing, you can use the OM206 Media Player keypad to navigate through your music collection.

display lyrics

A guide in how to display lyrics on the screen of the OM206 Media Player whilst an Mp3 file is playing.

information

The OM206 Media Player can display lyrics whilst an Mp3 is playing.
Lyrics will appear on "Lyric Line 1 and 2 " shown here.

information

To enable the lyric feature on your OM206 Media Player, an .lrc file containing the lyrics needs to be saved within the player folder with the exact file name as the corresponding Mp3 file. We recommend this feature to advanced users. To learn more about this feature visit www.en.wikipedia.org/wiki/LRC_(file_format)

display photos

A guide in how to display your .jpg photo images on the screen of the OM206 Media Player

Step 1

Using the keypad, scroll to the Photo icon using + − ⏭ then press M

Step 2

Use the keypad to select a photo with the ⏮ ⏭ or the + − buttons. Once your selection has been made press the M to display the photo on the screen.

Step 3

Whilst the photo is displayed on the screen, you can display the next saved photo instantly by pressing the ⏮ or ⏭ buttons

display photo slide show

A guide in scrolling your photo album in a slide show on the screen of your OM206 Media Player

Step 1

Using the keypad, scroll to the Photo icon using + − ⏭ then press M

Step 2

On the keypad to select a photo file using ⏮ ⏭
Or the + − Once your selection is made press the M to display the photo.

Step 3

Whilst the photo is displayed on the screen, press the ● to begin a slide show of all images within the OM206 folder.
To stop the slide show press ●

play a movie

A guide in playing .avi format video files on your OM206 Media Player.
Note: It is recommended that users of this feature have an understanding of video file size conversion and understand that .avi format is supported on this Media Player.

Step 1

Using the keypad, scroll to the Video icon using + − ▶▶| then press M

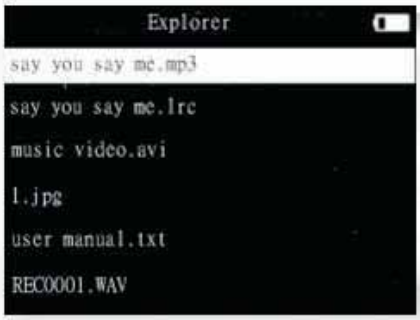

Step 2

Use the keypad to select a video with the |◀◀ ▶▶| Or the + − Once your selection is made press M on the keypad.

Step 3

The selected video will now play on the screen

information

Whilst your selected video is playing the following controls are available

▶▶| Fast Forward	+ Volume Down	M Return to video menu
|◀◀ Rewind	− Volume Up	● Play / Pause

record voice & sound

A guide in recording sound and your voice on the hard drive of the OM206 Media Player

Step 1

Using the keypad, scroll to the Record icon using + − ▶▶| then press M

Step 2

Using the keypad,
Press M to commence recording
Press M to pause and restart recording
Hold down M for 3 seconds to stop recording
To return to the main menu, hold down M after the recording has stopped.

information

The microphone is located on the bottom of the player beside the USB input. For best recording results, do not speak directly into the microphone as the sound may distort. The OM206 Media Player microphone is designed to capture all types of sound with the best possible quality.

play voice & sound recording

A guide in playing back a pre recorded .wav file

Step 1

Using the keypad, scroll to the music icon using + − ▶▶| Then press the M

Step 2

Scroll to the recording using the + −
Begin playing the recording by pressing ●

information

It is recommended when making a recording; remember the file name. This will assist when finding the file to playback.

reading e-books

A guide in reading .txt file format on the Om206 Media Player

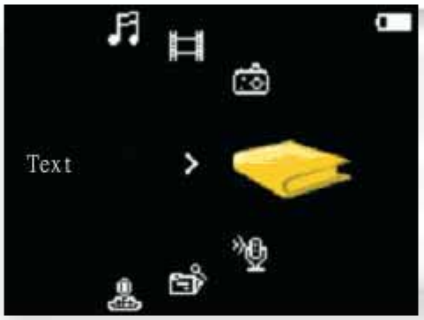

Step 1

Using the keypad, scroll to the Text icon using + − ▶▶| Then press the M

Step 2

Use the keypad to select a .txt file with the |◀◀ ▶▶|
Or the + − Once your selection is made press M on the keypad to begin reading the document.

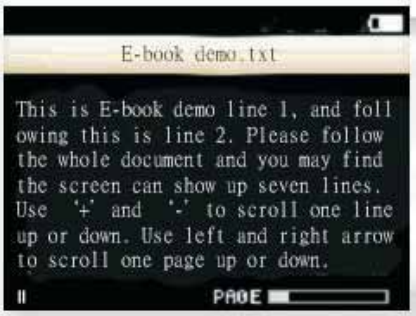
E-book demo.txt
This is E-book demo line 1, and foll
owing this is line 2. Please follow
the whole document and you may find
the screen can show up seven lines.
Use '+' and '-' to scroll one line
up or down. Use left and right arrow
to scroll one page up or down.
PAGE

Step 3

Using the keypad,
Press + or − to scroll a line at a time.
Press ⏮ or ⏭ to scroll a page at a time

information

How to auto browse (Automatic scrolling) the text:
While reading the text, press ●
The text will scroll automatically according the speed setting set in the Settings menu.
Press ● again will stop the auto browsing.

book mark an e-book

A guide in book marking a place in your .txt file for later reading

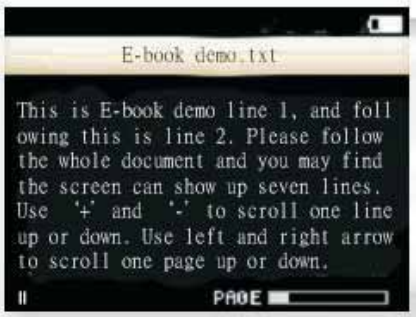
E-book demo.txt
This is E-book demo line 1, and foll
owing this is line 2. Please follow
the whole document and you may find
the screen can show up seven lines.
Use '+' and '-' to scroll one line
up or down. Use left and right arrow
to scroll one page up or down.
PAGE

Step 1

Whilst reading an e-book, hold − for 3 seconds to open the Save BookMark window.

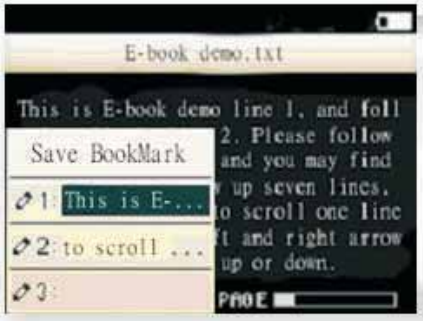

Step 2

Select the any one of the three bookmark positions by using + and −
Then press M to save the book mark

loading a book mark

A guide in finding a bookmark left on your .txt file

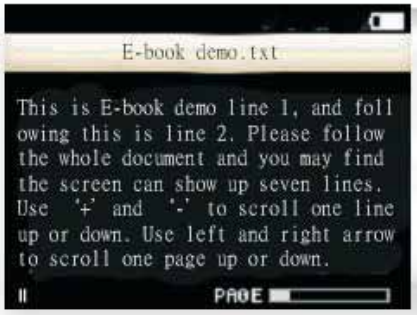
E-book demo.txt
This is E-book demo line 1, and foll
owing this is line 2. Please follow
the whole document and you may find
the screen can show up seven lines.
Use '+' and '-' to scroll one line
up or down. Use left and right arrow
to scroll one page up or down.
PAGE

Step 1

After loading a text e-book press + and hold for 2 seconds to open the Load BookMark window.

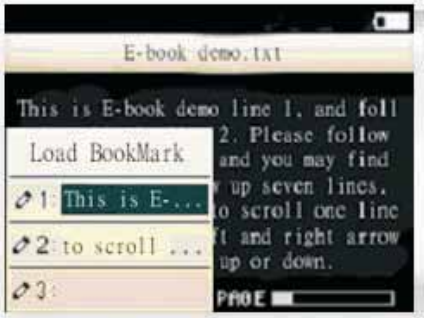

Step 2

Select the bookmark you wish to load by using + and −

information

The player only bookmarks one text document at any one time. When a bookmark has been saved in a text document, the bookmarks saved on other documents are cancelled.

playing the mini game

A guide in controlling the pre loaded mini game

Step 1

Using the keypad, scroll to the Game icon using + − ▶▶| Then press the M

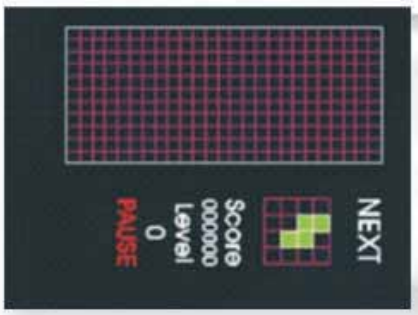

information

Press ● to start and pause the game.
Press + and − to move the block right and left.
Press ▶▶| to rotate the block.
Press |◀◀ to speed up the fall.
Press M to make the block fall immediately.

keylock the player

A guide in locking the keypad of your Om206 Media Player

Step 1

In any menu screen,
Press and hold both |◀◀ and ▶▶| buttons for 3 seconds to activate the hold function.

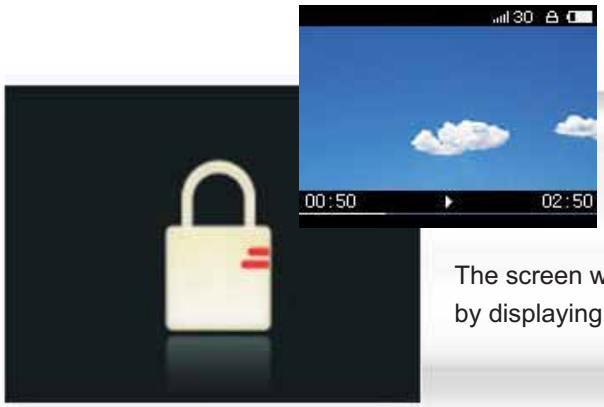

Step 2

The screen will show that the keypad is locked by displaying either of these screens

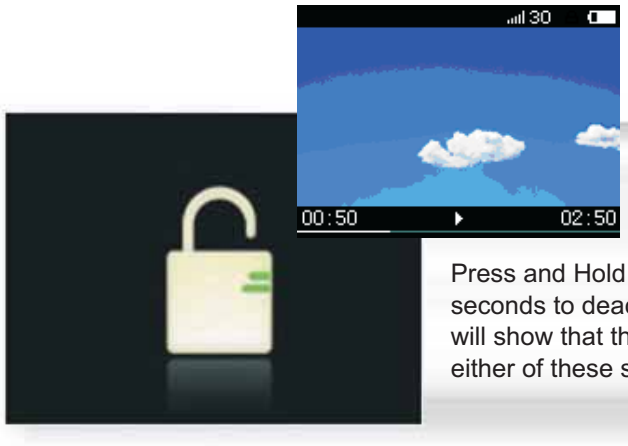

Step 3

Press and Hold both |◀◀ and ▶▶| buttons for 3 seconds to deactivate the hold button. The screen will show that the keypad is unlocked by displaying either of these screens

deleting a file

A guide in deleting a file from your OM206 Media Player

Step 1

Using the keypad, scroll to the Navigation icon using + − ▶▶| then press M

Step 2

Use + and − to locate the file you wish to delete then press ●

Step 4

Press the |◀◀ to highlight the Yes option then press M

using the .avi converter

The disc supplied with your OM206 Media Player contains a tool that converts most video files into .avi file format. Always use the .avi converter tool to convert your video files before transferring them onto your player. The file must be in this format in order to display on the screen of your media player.

installing the .avi converter

A guide in installing the .avi converter tool on your computer

Step 1

Insert the OM206 Media Player installation disc in your computer disc drive

Step 2

Open the files on the CD in My Computer then open the folder named " AVI "
Double click the icon called "AVIConverter " to begin the installation process

Step 3

When the window "Installer Language" appears, use the pull down menu to select English.

Step 4

Select Next at the bottom of the window

Step 5

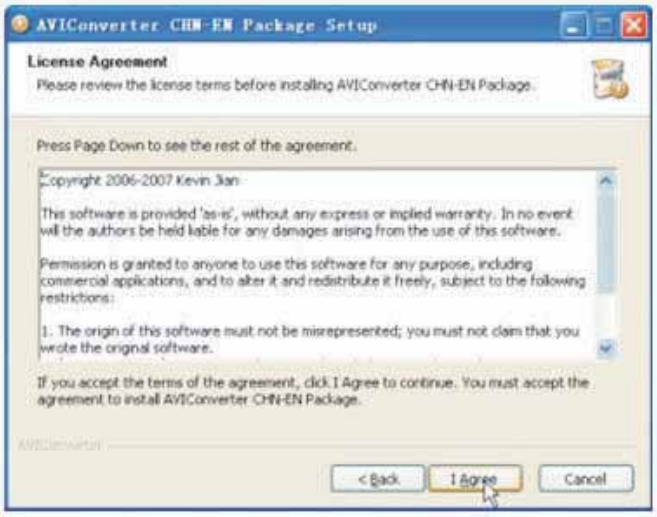
AVIConverter CHN-EN Package Setup
License Agreement
Please review the license terms before installing AVIConverter CHN-EN Package.
Press Page Down to see the rest of the agreement.
Copyright 2006-2007 Kevin Jian
This software is provided 'as-is', without any express or implied warranty. In no event will the authors be held liable for any damages arising from the use of this software.
Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the following restrictions:
1. The origin of this software must not be misrepresented; you must not claim that you wrote the original software.
If you accept the terms of the agreement, click I Agree to continue. You must accept the agreement to install AVIConverter CHN-EN Package.
< Back
I Agree
Cancel

After reading the licence agreement select I Agree at the bottom of the window

Step 6

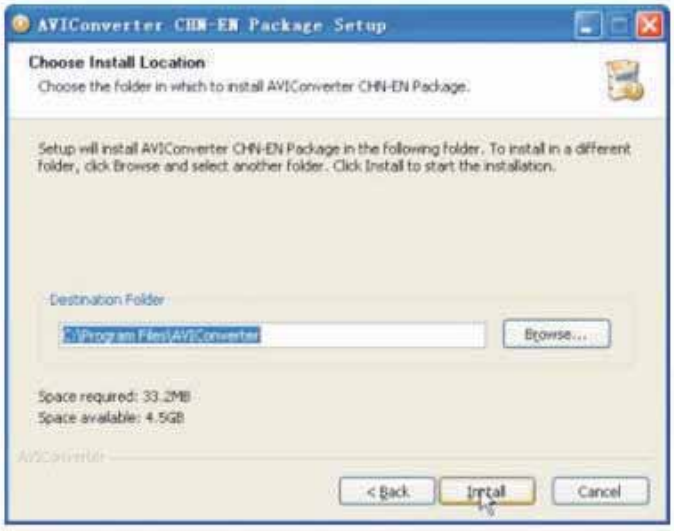
AVIConverter CHN-EN Package Setup
Choose Install Location
Choose the folder in which to install AVIConverter CHN-EN Package.
Setup will install AVIConverter CHN-EN Package in the following folder. To install in a different folder, click Browse and select another folder. Click Install to start the installation.
Destination Folder
C:\Program Files\AVIConverter
Browse...
Space required: 33.2MB
Space available: 4.5GB
< Back
Install
Cancel

Select install at the bottom of the screen.

Step 7

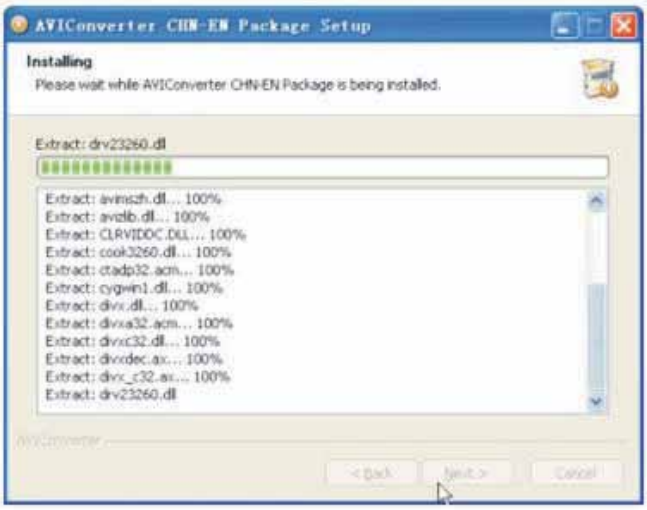

The program will now be extracted and installed on your computer.

Step 8

AVIConverter CHN-EN Package Setup
Completing the AVIConverter CHN-EN Package Setup Wizard
AVIConverter CHN-EN Package has been installed on your computer.
Click Finish to close this wizard.
Run AVIConverter CHN-EN Package
< Back
Finish
Cancel

Click finish to complete the software installation.

using the .avi converter

A guide in converting files to .avi format using the conversion software.

Step 1

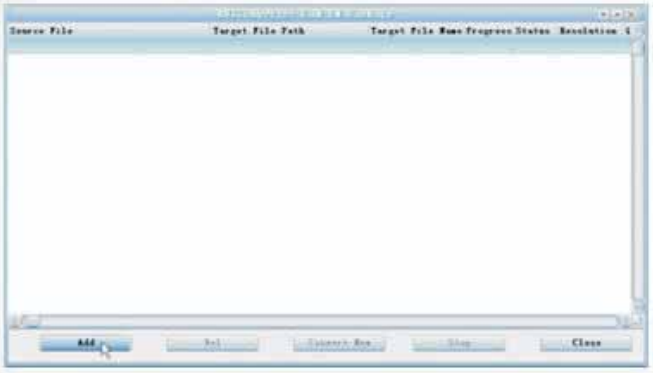

After starting the .avi Converter software from the start menu, select Add at the bottom left of the first window

Step 2

Use the resolution pull down menu to select the screen resolution 176x132

Then select Source File

Step 3

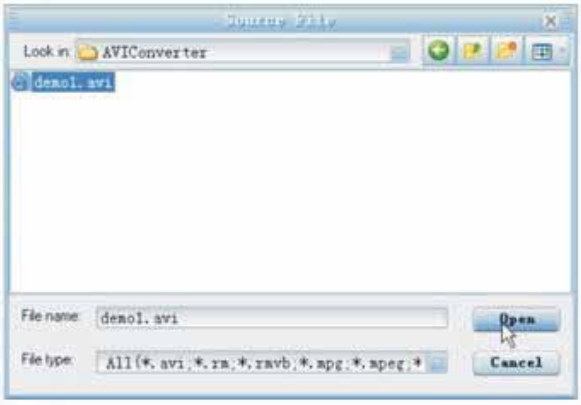

Locate the video file you wish to convert and click Open

Step 4

Select the location where you would like the converted file to be saved in by clicking in the box beside Target File Path then press Save

Step 5

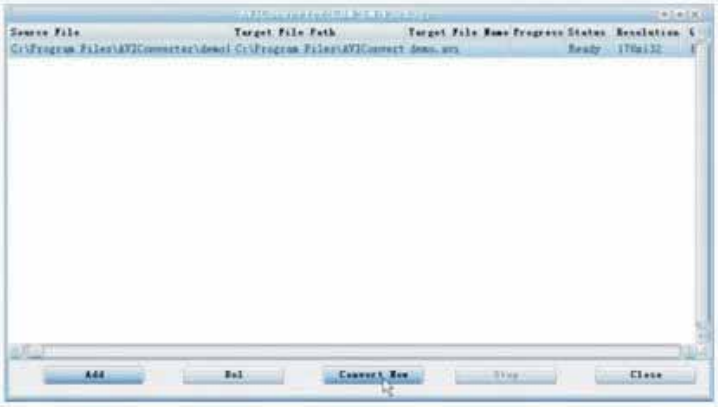

Click the Convert Now button at the bottom of the window

Step 6

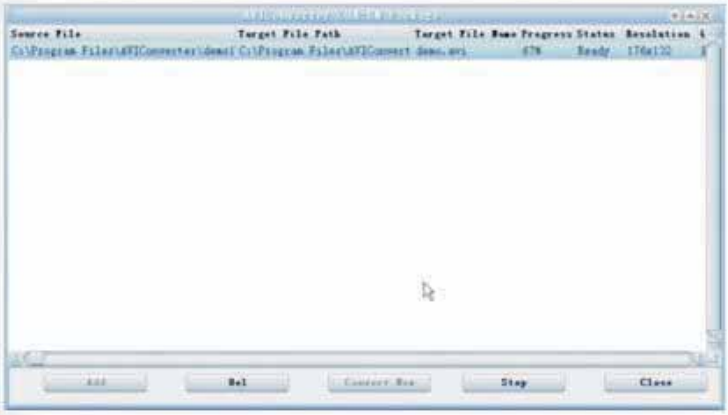

The status of the conversion will be shown whilst the software saves the file as an .avi format video.

Step 7

Once the file is converted, the progress column will show 100% and the status column will report an OK status. The file is now converted successfully. The software can now be shut down by clicking Close at the bottom of the screen. Alternatively, you can choose another file to convert by clicking add and beginning this procedure again.

system settings

It is recommended that the system settings are only altered by experienced users of the OM206 Media Player.

repeat mode settings

A guide in changing the way the OM206 Media Player chooses the next Mp3 track

Step 1

Using the keypad, scroll to the Settings icon using + − ▶▶| then press M

Step 2

Use the + and − to select the Music option then press M

Step 3

Use the + and − to select the Repeat Mode option then press M

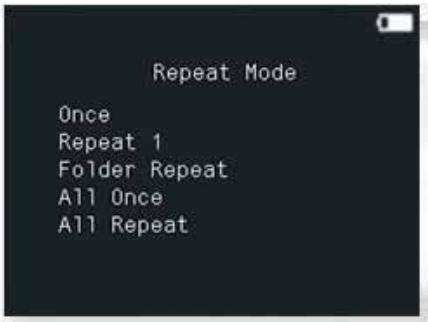

Step 4

Use the + and − to highlight your choice then press M

information

Repeat Mode Options
Once - Play a single Mp3 file a single time
Repeat 1 - Play a single Mp3 file continuously
Folder Once - Play all Mp3 files within a chosen folder once
Folder Repeat - Play all Mp3's within a folder continuously
All Once- Play all Mp3's saved on the media player once
All Repeat - Play all Mp3's on the media player continuously

play mode settings

A guide in changing the way the OM206 Media Player chooses the next Mp3 track

Step 1

Using the keypad, scroll to the Settings icon using + − Then press M

Step 2

Use the + and − to select the Music option then press M

Step 3

Use the + and − to select the Play Mode option then press M

Step 4

Use the + and − to select the play mode of your choice then press M

Order Plays Mp3 files in the order they are saved on the OM206 Media Player

Shuffle Plays Mp3 files randomly in no order

EQ Select

A guide in choosing pre set equalizer settings on the OM206 Media Player

Step 1

Using the keypad, scroll to the Settings icon using + − ⏭ then press M

Step 2

Use the + and − to select the Music option then press M

Step 3

Use the + and − to select the Play Mode option then press M

Step 4

Use the + and − to select the preset equalizer setting that best suits your music then press M

User EQ Select

A guide in changing the graphic equalizer settings on the OM206 Media Player

Step 1

Using the keypad, scroll to the Settings icon using + − ▶▶| then press M

Step 2

Use the + and − to select the Music option then press

Step 3

Use the + and − to select the User EQ Select option then press M

Step 4

Use the ▶▶| to choose the frequency you wish to alter. When the frequency is highlighted, use the + and − to move the indicator up and down. After making the changes use the ▶▶| until the Yes option is highlighted then press M to save the settings.

change recording quality

A guide in changing the file size of recordings by adjusting the recording quality on the OM206 Media Player

Step 1

Using the keypad, scroll to the Settings icon using + − ⏭ then press M

Step 2

Use the + and − to select the Music option then press M

Step 3

Use the + and − to select the REC Quality option then press M

Step 4

Use the + and − to select the quality recording will be taken at then press M to save this setting.

change recording volume

A guide in changing the volume when recording on the OM206 Media Player

Step 1

Using the keypad, scroll to the Settings icon using + − ⏭ then press M

Step 2

Use the + and − to select the Music option then press M

Step 3

Use the + and − to select the REC Volume option then press M

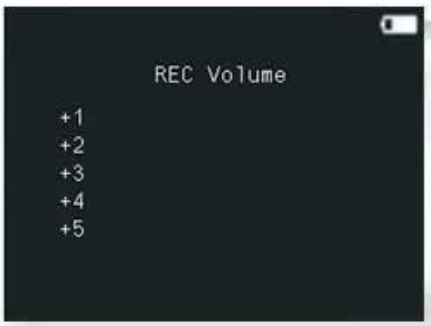

Step 4

Use the + and − to select the volume recording will be taken at then press M to save this setting.

change text auto browse speed

A guide in changing the speed text scrolls when using the auto browse function on the OM206 Media Player

Step 1

Using the keypad, scroll to the Settings icon using + − ▶▶| then press M

Step 2

Use the + and − to select the Auto Browse option then press M

Step 3

Use the + and − to select the Text Browse option then press M

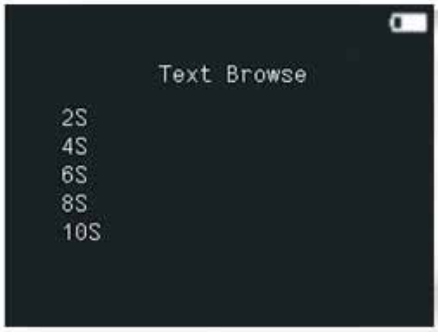

Step 4

Use the + and − select the speed you would like text documents to scroll at then press M

change photo auto browse speed

A guide in changing the speed new photos appear when using the slide show function on the OM206 Media Player

Step 1

Using the keypad, scroll to the Settings icon using + − ▶▶| then press M

Step 2

Use the + and − to select the Auto Music option then press M

Step 3

Use the + and − to select the Photo Browse option then press M

Step 4

Use the + and − select the speed you would like photos slide shows to scroll at then press M

change background light off time

A guide in changing the amount of time the background light remains on after using the keypad on the OM206 Media Player

Step 1

Using the keypad, scroll to the Settings icon using + − ▶▶| then press M

Step 2

Use the + and − to select the Display option then press M

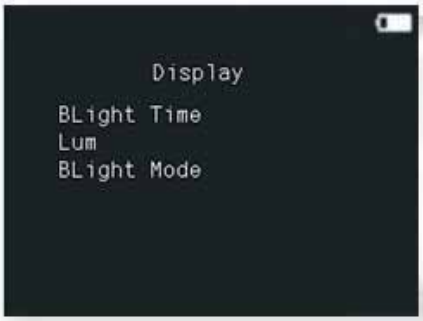

Step 3

Use the + and − to select the BLight Time option then press M

Step 4

Use the + and − to select how many seconds the background light will remain on then press M to save this setting.

change screen luminance

A guide in changing the screen display brightness on the OM206 Media Player

Step 1

Using the keypad, scroll to the Settings icon using + − ▶▶| then press M

Step 2

Use the + and − to select the Display option then press M

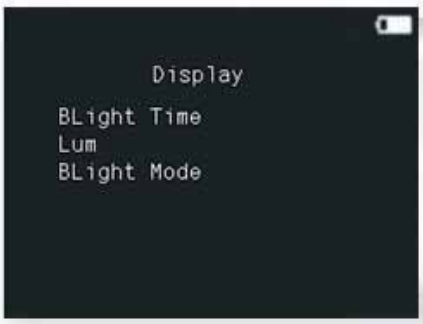

Step 3

Use the + and − to select the Lum option then press M

Step 4

Use the + and − to change the screen brightness then press M to save this setting

change background light mode

A guide in u choosing different screen power setting to assist in battery preservation on the OM206 Media Player

Step 1

Using the keypad, scroll to the Settings icon using + − ▶▶| then press M

Step 2

Use the + and − to select the Display option then press M

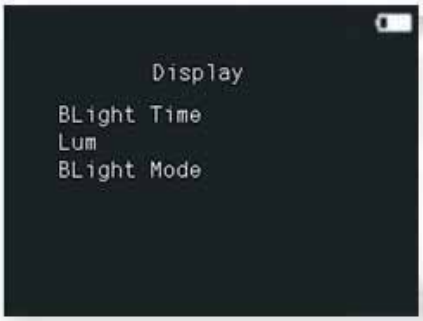

Step 3

Use the + and − to select the Blight Mode option then press M

Step 4

Use the + and − to select the background light mode then press M to save this setting.

reset to default settings

A guide in returning the OM206 Media Player to factory settings.

Step 1

Using the keypad, scroll to the Settings icon using + − ▶▶| then press M

Step 2

Use the + and − to select the System option then press M

Step 3

Use the + and − to select the Default Set option then press M

Step 4

Use the + and − until Yes is highlighted then press M

power off time select

A guide in having the OM206 Media Player automatically turn off after a period of time.

Step 1

Using the keypad, scroll to the Settings icon using + − ▶▶| then press M

Step 2

Use the + and − to select the PowerOff Time option then press M

Step 3

Use the + and − to select the period of time before power is switched off on the player then press M to save this setting.

expanding the memory

A guide in expanding the memory on the OM206 Media Player.

Step 1

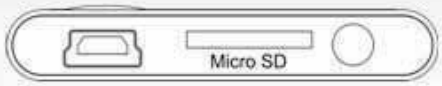

Locate the Micro SD slot on the base of the Om206 Media Player

Step 2

Locate the micro SD card.
Note: Maximum capacity supported by the OM206 Media Player **- 2 Gigabyte micro SD card.**

Step 3

Slide the card into the slot as shown.
(Micro SD metal strips facing up).
Push the card all the way in and then release to lock it into place.

information

When using the OM206 Media Player with a Micro SD card inserted, the player will prompt you within different menus for Memory or SD Card. When this screen appears, choose the device that has your chosen file stored on it then press M

Note: The Micro SD card will now show as "SD Card" when exploring the files on the player. The player can now save files on the Micro SD card and the OM206 Media Player.

WARNING: *Only insert and remove the Micro SD card when the OM206 Media player is powered off.*

troubleshooting

Problem	Possible Causes
Player will not power on	Battery may be out of charge. Power button at the top of the player may not be in the on position
No response when buttons are pressed	The player may be key locked. Go to page 24 and review the procedure on key locking the media player
Cannot play music or no sound during playback	Earphones may be faulty. Check the earphones plugged in securely. Battery may be out of charge. Volume may need to be turned up. Mp3 file may be faulty
Player will not unlock after keylock	Turn the power off at using the power on / off button at the top of the player.
Cannot upload / download documents / PC cannot detect the player	The USB cable may not be securely connected. Memory may be full. Device driver may need to be reinstalled.
Cannot record voice or sound	Battery may be out of charge. Memory may be full.
Strange characters appear on the screen	Incorrect language selected in the settings menu.
Memory size not correct	Due to the space taken up by the system firmware and FAT, the usable memory is less than 90-95% of the indicated memory size.
Shadow image displays on the screen after power off	Due to the characteristics of TFT display, there will be a shadow image lasting for about 20 seconds when the power switch is s witched to the " OFF " position.

firmware upgrade

If the OM206 Media player malfunctions or the software is frozen, it is possible to reload the player using the firmware upgrade function. Our customer service team will help you perform this process please contact support@linophir.com.au or by phone 1800 656 630

safety

- The player should not be stored in an area of extreme high temperature particularly inside a closed area (e.g. in a car).
- The player should be kept in the areas free from extreme temperatures, moisture and dust.
- Dropping the player can damage the screen.
- Please select an appropriate sound level to avoid a long term auditory disorder.
- Do not attempt to dismantle the player.
- We do not assume any liability, including but not limited to, data loss arising out of improper operation or incidental damages.

www.olinstyle.com

Linophir International Pty Ltd

Linophir and its stylized logo are registered in the Australian IP office
OLIN is a registered trademark of Linophir International Pty Ltd
All rights reserved
All promotional materials are offered for reference only
Actual products may vary

support@linophir.com.au
Phone: 1800 656 630